



## INSTRUCTION BOOKLET



***SUPER NINTENDO***<sup>TM</sup>  
**ENTERTAINMENT SYSTEM**  
**PAL VERSION**

<http://www.replacementdocs.com>

**Nintendo**

NINTENDO AUSTRALIA PTY. LTD.  
 48-52 Dunlop Road, Mulgrave, Victoria 3170 Australia  
 NEW ZEALAND AGENT MONACO CORPORATION LTD.  
 10 Rothwell Avenue, Albany, Auckland



WARNING: PLEASE CAREFULLY READ THE CONSUMER INFORMATION AND PRECAUTIONS BOOKLET INCLUDED WITH THIS PRODUCT BEFORE USING YOUR NINTENDO® HARDWARE SYSTEM, GAME PAK OR ACCESSORY.

## TABLE OF CONTENTS

	PAGE
<b>SECTION 1</b>	
SUPER NES INSTRUCTION MANUAL	2
SUPER NES COMPONENTS	3
CONNECTION AND INSTALLATION	4
CONNECTING THE AC ADAPTER	9
CONNECTING THE CONTROLLERS	10
<b>SECTION 2</b>	
SUPER NES OPERATION	11
REMOVING GAME PAKS	12
RETURNING TO REGULAR TV	12
<b>SECTION 3</b>	
TROUBLESHOOTING	13
<b>SECTION 4</b>	
WARRANTY AND SERVICE INFORMATION	15

*This seal is your assurance that Nintendo has reviewed this product and that it has met our standards for excellence in workmanship, reliability and entertainment value.*

*Always look for this seal when buying games and accessories to ensure complete compatibility with your Nintendo product.*



## SECTION 1

### SUPER NES INSTRUCTION MANUAL

Thank you for purchasing the Super NES™, Nintendo's most advanced 16-bit video entertainment system, featuring full digital stereo sound and breathtaking graphics!

**NEED HELP?**

**TELEPHONE THE NINTENDO HELPLINE**

**190 224 1001**

 
**SEE PAGE 15 FOR MORE DETAILS**

Please read the set-up instructions and the **Consumer Information and Precautions Booklet** before attempting to connect the Super NES Control Deck to your TV set. If after reading all set-up instructions, you are still unable to hook up your system, please call the Consumer Assistance Helpline at the number listed above.

If the Supply Cord of this Transformer is Damaged the Transformer must be returned to Nintendo for replacement.


## SUPER NES COMPONENTS

### Back View of CONTROL DECK

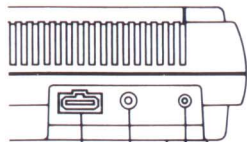


AC ADAPTER JACK  
RF SWITCH JACK  
MULTI OUT JACK

### CONTROL DECK

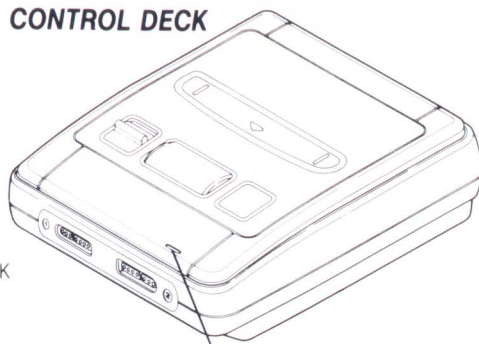 

POWER INDICATOR LIGHT

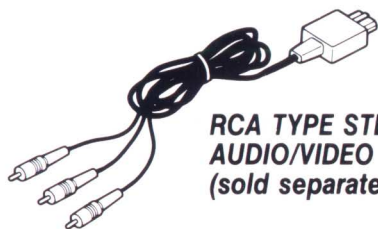 

RCA TYPE STEREO  
AUDIO/VIDEO CABLE  
(sold separately)

### EURO CONNECTOR PLUG (not included)

 


### AC ADAPTER



AC PLUG to Control Deck

### SUPER NES CONTROLLER

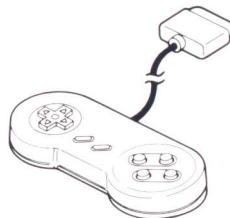

### RF SWITCH

75Ω CONNECTOR  
(to TV's ANTENNA SOCKET)

ANTENNA SOCKET  
(from Antenna cable)

 
RF PLUG  
(to Control Deck)

## CONNECTION AND INSTALLATION

There are three (3) different methods of connecting the Super NES Control Deck to a TV. To choose which method to use, first match one of the drawings below to the connection panel on the back of your TV set. Then turn to the page shown for the connection diagram for your TV.


- If your TV has RCA type audio/video jacks and looks like this:

Then turn to **page 5**.

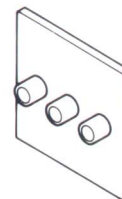


- If your TV has Euro type (21 pin) jack and looks like this:

 Then turn to **page 7**.

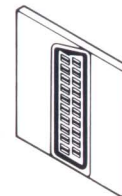

- If your TV has an Antenna Socket and looks like this:

 Then turn to **page 8**.

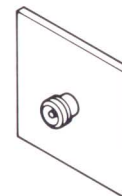


NOTE: If your TV has more than one type of connector, then choose whichever connector is not currently being used.

## CONNECTION METHOD 1 USING RCA TYPE AUDIO/VIDEO JACKS

 - ▶ If your TV has *stereo* audio/video input jacks (left & right audio / video)  
Then follow diagram (A)
- ▶ If your TV has audio/video input jacks, but not stereo (audio / video only)  
Then follow diagram (B)

(A)

**Back of  
CONTROL DECK**

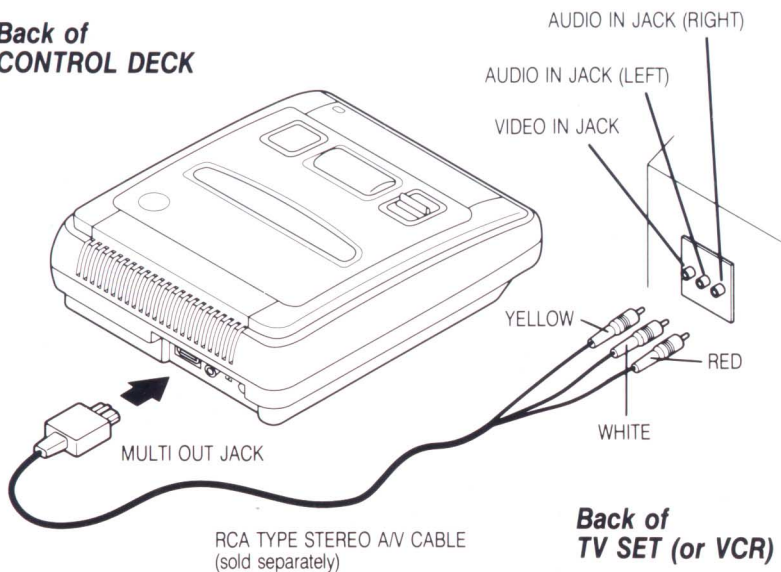


**NOTE:** This is the method of connecting the Super NES Control Deck to a TV to get the full effects of the stereo sound. It is also possible to connect the audio output of the Control Deck to a stereo system. For additional information on this type of connection call: (Phone number see page 2 or 15)

**AFTER COMPLETING THE CONNECTIONS AS SHOWN, TURN TO PAGE 9**

 (B)

**Back of  
CONTROL DECK**

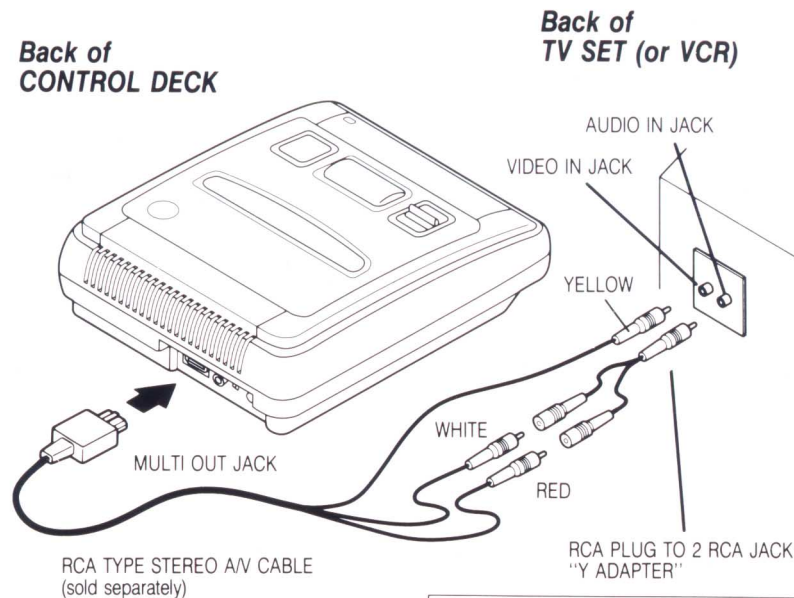

**NOTE:** This method of connection will produce mono sound only (the left right stereo channels are mixed).

**AFTER COMPLETING THE CONNECTIONS AS SHOWN, TURN TO PAGE 9**

 


## CONNECTION METHOD 2 USING EURO TYPE (21 PIN) JACK

- Connect the Control Deck and your TV set with the RCA type stereo Audio/Video cable (sold separately) and Euro connector plug (not included) as shown below.

**Back of  
CONTROL DECK**

**Back of  
TV SET (or VCR)**

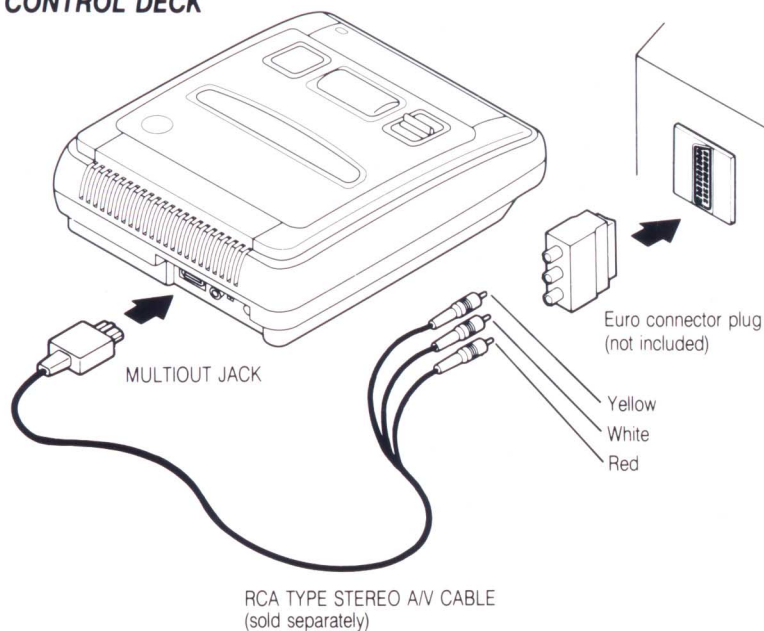

**NOTE:** This is the method of connecting the Super NES Control Deck to a TV to get the full effects of the stereo sound.


**AFTER COMPLETING THE CONNECTIONS AS SHOWN, TURN TO PAGE 9**
 
## CONNECTION METHOD 3 USING THE RF SWITCH

- Connect the Control Deck and your TV set with the RF Switch as shown below.

1. Connect the plug of the RF switch to the RF switch jack on the back of the control deck.
2. Connect the 75Ω connector of the RF switch to the antenna input socket of the TV.
3. Then connect your ordinary antenna cable to the antenna socket of the RF switch.


CONNECT TO RF SWITCH JACK

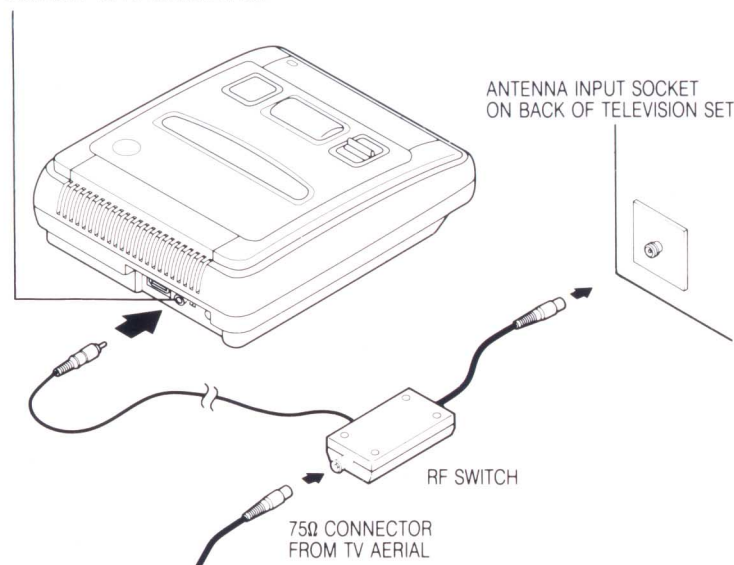


**NOTE:** This method of connection will produce mono sound only (the left and right stereo channels are mixed).

**AFTER COMPLETING THE CONNECTIONS AS SHOWN, TURN TO PAGE 9**

 NOTE: If a VCR is already connected between the antenna and the antenna socket on the back of your TV set, the RF switch must be installed between the VCR and the TV as shown below:

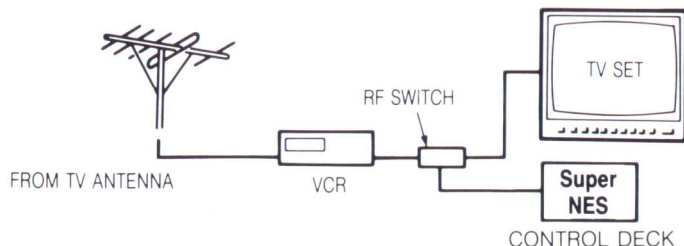


## CONNECTING THE AC ADAPTER

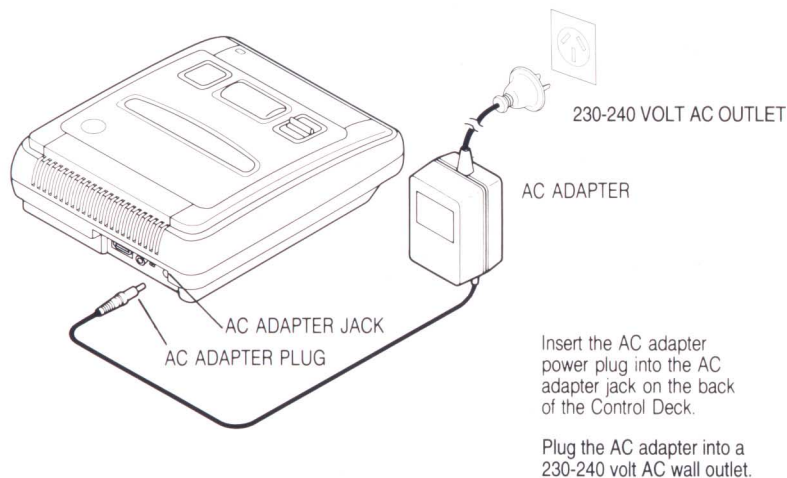 

NOTE: To save energy, unplug the AC adapter from the wall outlet when the Super NES is not being used.

## CONNECTING THE CONTROLLERS

 Plug the Super NES Controllers into the sockets on the front of the Control Deck as shown.

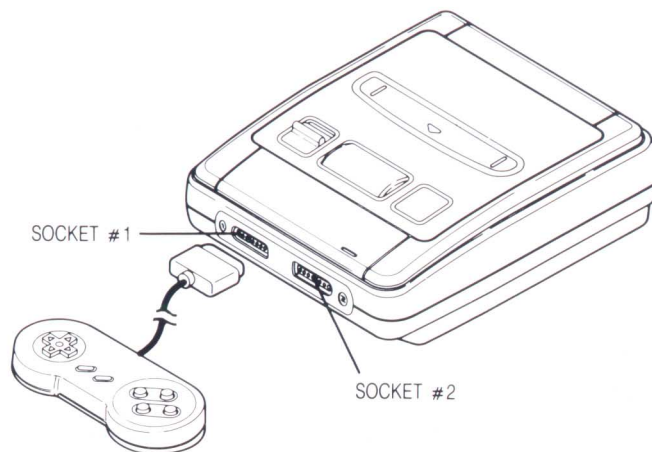

The Super NES Controllers are identical and can be plugged into either socket number, but the *select* and *start* buttons will work only on the controller plugged into socket #1. For one-player games or when you are playing a game alone, the controller must be plugged into socket #1. For two-player games, plug the second controller (sold separately) into socket #2.

Each game may have different functions for the various buttons and control pad. Some games may have no pause function or may have a different function for both the *select* and *start* buttons. Consult the instruction booklet for the Game Pak you are using.

NOTE: Do not plug or unplug the controllers from the Control Deck during game play or while the power on, as this may cause a game malfunction.

## SECTION 2

### SUPER NES OPERATION

- 1 Turn your television on.
- 2 Set your TV to channel 0.

 
NOTE: If you are using audio/video jacks (CONNECTION METHOD #1), then set the TV/VIDEO switch on your TV to "VIDEO".

- 3 If your TV has an automatic fine tuning control (AFC), turn it off. If turning off the AFC causes your TV to display only black and white, then leave the AFC on.  
Use the manual fine tuning dial to adjust the picture after loading a Game Pak as described below.

- 4 Make sure the power switch of the Control Deck is turned off.

**CAUTION: Always make sure that the power switch of the Control Deck is off and that you have checked the Game Pak edge connector for foreign material before attempting to load a Game Pak into the Control Deck.**

- 5 Load a Game Pak into the top of the Control Deck as shown. Push it down all the way.

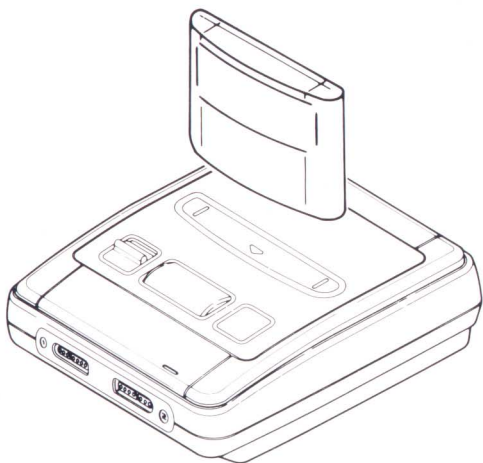

- 6 Slide the power switch to the on position.

Make sure the red power indicator light on the front of the Control Deck is on (check the AC adapter and plug if not). Push the *reset* button and release. After a moment, a game display should appear on the TV.

NOTE: If there is no game display or a distorted picture on the TV screen, slide the power switch off. Press the *eject* button and remove the Game Pak. Start over from step ④. If you are still having problems, check the TROUBLESHOOTING guide on page 13, or call the Consumer Assistance Helpline at: (Phone number see page 2 or 15)

- 7 Use the *select* button on controller #1 to select the game you want, then press the *start* button to begin the game.

### REMOVING GAME PAKS

- 1 Slide the power switch to the off position.

**CAUTION: When the power switch is on, a Game Pak lock is engaged. Do not try to remove a Game Pak by force. Always slide the power switch to the off position before loading or removing a Game Pak.**

- 2 Push the *eject* button.

- 3 Remove the Game Pak.  
(Turn the Control Deck power off when not in use).

### RETURNING TO REGULAR TV

After you have finished playing, slide the power switch of the Control Deck to the off position. Turn your TV selector to the desired channel to view regular TV programs. There is no need to disconnect the RF switch cables, etc.

NOTE: If you are using audio/video jacks (CONNECTION METHOD #1), then set the TV/VIDEO switch on your TV, back to "TV".

---

**FOR ADDITIONAL MAINTENANCE, CARE AND PRECAUTIONS, REFER TO THE CONSUMER INFORMATION AND PRECAUTIONS BOOKLET**

---



## SECTION 3

### TROUBLESHOOTING

Before seeking repair services, check the problem against the list below:



#### PROBLEM

##### **TV SCREEN DOES NOT COME ON.**

#### SOLUTION

- Make sure the power switch of the Control Deck is turned on and the AC adapter and AC output plug are plugged in.

 


#### PROBLEM

##### **NO GAME DISPLAY IMAGE ON TV SCREEN (but screen is lit).**

#### SOLUTION

- Make sure the power switch on the Control Deck is turned on.
- Make sure that the AC adapter is plugged into a 230-240 volt wall outlet and that the AC adapter output plug is plugged into the Control Deck.
- Make sure that the Control Deck and the antenna or cable are connected to the RF switch properly and that the RF switch is connected to the TV (see page 8)
- Make sure the Game Pak is loaded into the Control Deck correctly (See pages 11-12 SUPER NES OPERATION).
- If your TV has both audio/video and VHF (antenna) inputs, make sure the TV/VIDEO switch is switched to the correct input.

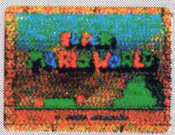

#### PROBLEM

##### **GAME DISPLAY IS ON TV SCREEN BUT THE PICTURE IS ROLLING OR THE SCREEN HAS BARS OR LINES ON IT.**

#### SOLUTION

- Adjust the vertical or horizontal hold controls on your television until the picture becomes steady.



#### PROBLEM

##### **PICTURE QUALITY IS GOOD, BUT THE SOUND BUZZES.**

#### SOLUTION

- A particularly strong television station may be broadcasting in your area and causing interference. Try disconnecting the antenna wire from the RF Switch (You will have to reconnect it again for regular television viewing.)
- Make sure that you are not trying to use both the RF switch and the audio/video cables. Only one or the other is required (see page 4 CONNECTION AND INSTALLATION).

 


#### PROBLEM

##### **WHEN NOT PLAYING, REGULAR TV WILL NOT COME IN.**

#### SOLUTION

- Make sure the power switch of the Control Deck is turned off.
- Make sure that the antenna or cable is connected to the RF switch properly and that the RF switch is connected to the TV (See page 8).
- If regular TV programs will still not come in, unhook your RF switch Box from your TV and hook up the antenna or cable directly. (You will have to hook up the RF switch again in order to play.) Or use a video switch (not provide).

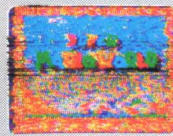

#### PROBLEM

##### **GAME DISPLAY IS ON TV SCREEN BUT THE PICTURE IS FUZZY, HAS NO COLOUR OR HAS SNOW IN IT.**

#### SOLUTION

- Make sure that the Control Deck and the antenna or cable are connected to the RF switch properly and that the RF switch is connected to the TV (See page 8).
- Adjust the fine tuning and contrast controls on your TV to receive the clearest picture possible.
- If your TV has an automatic fine tuning control (AFC), turn it off and use the manual fine tuning dial to adjust the picture. If turning off the AFC causes your TV to display only black and white, then leave the AFC on.
- If the Control Deck is too close to the television, the Control Deck may cause some interference. Try moving the Control Deck further from the TV.
- A particularly strong television station may be broadcasting in your area and causing interference. Try disconnecting the antenna wire from the RF switch Box. (You will have to reconnect it again for regular television viewing.) Or use a video switch (not provided).
- Make sure the short thick "coaxial" cable of the RF switch (marked TV), is connected to the VHF input your TV



#### PROBLEM

##### **PICTURE QUALITY IS GOOD, BUT THERE IS NO SOUND.**

#### SOLUTION

- Make sure the TV volume is turned up.
- Adjust the fine tuning control until the sound is good.
- The sound in some Game Paks begins only after the start button is pressed.



#### PROBLEM

##### **PICTURE IS BLINKING OR DISTORTED.**

#### SOLUTION

- Try pushing the reset button. If there is no improvement, slide the Control Deck power switch off, remove the Game Pak and re-load it. Slide the power switch back on and push the reset button.

**IF YOU ARE STILL UNABLE TO SOLVE THE PROBLEM, PLEASE CALL NINTENDO HELPLINE (Phone number see page 2 or 15)**



**WARRANTY FOR THE SUPER NINTENDO  
ENTERTAINMENT SYSTEM (CONTROL DECK)  
BY NINTENDO AUSTRALIA PTY. LTD.**

The product is sold subject to all warranties implied under the provisions of the Trade Practices Act of Australia. Nintendo Australia Pty. Ltd. (Nintendo) warrants to the original consumer/purchaser that this SUPER NES ("CONTROL DECK") shall be free from defects in material and workmanship. If a defect covered by this warranty occurs, Nintendo will repair or replace the (CONTROL DECK) at its option, free of charge.

To receive this warranty service, contact Nintendo's Head Office.

The undertaking to repair or replace the product will not apply if the (CONTROL DECK) has been damaged, after sale to the original consumer/purchaser, by negligence, accident, unreasonable use, modification, tampering, or by other causes unrelated to defective materials or workmanship.

**NINTENDO AUSTRALIA HEAD OFFICE ADDRESS:**

48-52 Dunlop Road, Mulgrave, Victoria 3170 Australia

Phone : (03) 9265-9900

• NINTENDO HELPLINE 190 224 1001

( LEGION CALL RATE AT 75 CENTS PER MINUTE

Calls from mobiles and public phones attract a higher rate. )