 


**SUPER NES
MOUSE™**

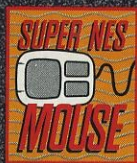

INSTRUCTION MANUAL

SUPER NINTENDO
ENTERTAINMENT SYSTEM

WARNING: PLEASE CAREFULLY READ THE CONSUMER INFORMATION AND PRECAUTIONS BOOKLET INCLUDED WITH THIS PRODUCT BEFORE USING YOUR NINTENDO® HARDWARE SYSTEM, GAME PAK, OR ACCESSORY.

TABLE OF CONTENTS

	PAGE
SECTION 1	
SUPER NES MOUSE MANUAL	2
MOUSE OPERATION	3
CONNECTING TO THE CONTROL DECK	4
SECTION 2	
CLEANING AND MAINTENANCE	5
MOUSE PRECAUTIONS	6
SECTION 3	
TROUBLESHOOTING	6
SECTION 4	
WARRANTY AND SERVICE INFORMATION	7
CONSUMER PARTS LIST AND ORDER FORM	8

This official seal is your assurance that Nintendo has reviewed this product and that it has met our standards for excellence in workmanship, reliability and entertainment value. Always look for this seal when buying games and accessories to ensure complete compatibility with your Nintendo product.



All Nintendo products are licensed by sale for use only with other authorized products bearing the Official Nintendo Seal of Quality™.

SECTION 1

SUPER NES MOUSE MANUAL

Thank you for purchasing the Super NES Mouse™, the unique mouse style controller developed for the Super Nintendo Entertainment System®. The Super NES Mouse provides new game play options and precise control when using the Super NES Mouse Game Paks.

To use the Super NES Mouse, you need:

- ① The Super Nintendo Entertainment System® Control Deck®
- ② Any Super NES Mouse Game Pak bearing the Official Nintendo Seal of Quality and the Super NES Mouse symbol.

NOTE: The Super NES Mouse will not work with the NES™ Control Deck.



Look for this symbol on other Game Paks specially designed for use with the Super NES Mouse.

NEED HELP WITH INSTALLATION MAINTENANCE OR SERVICE?

Call the **Nintendo World Class Service®** Center
Consumer Assistance Hotline

 
1-800-255-3700

Mon. - Sat., 4:00 a.m. - 12:00 midnight; Sun., 6:00 a.m. - 7:00 p.m., Pacific Time
(Times subject to change)

Please read the instructions before attempting to operate the Super NES Mouse. If after reading all the instructions, you have any questions about use of the Super NES Mouse, please call the Consumer Assistance Hotline at the number listed above.

™ and ® are trademarks of Nintendo of America Inc. © 1992 Nintendo of America Inc. All Rights Reserved

MOUSE OPERATION

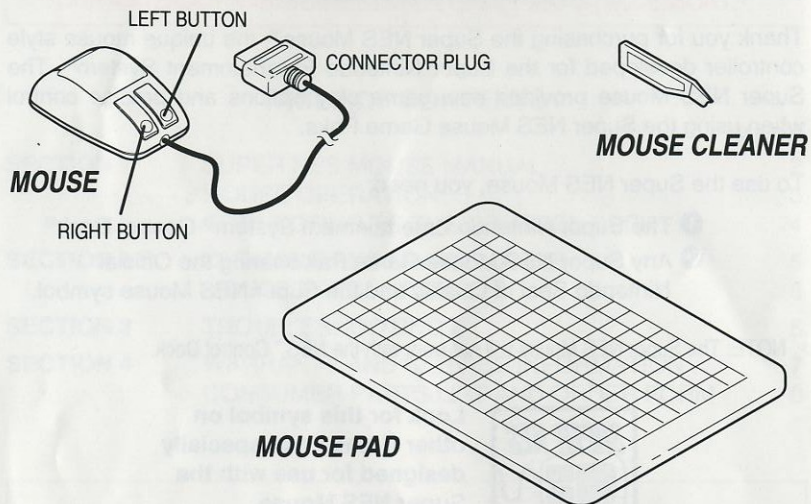

⚠ WARNING

 
POTENTIAL CHOKER HAZARD FOR INFANTS

THE MOUSE CONTAINS A BALL THAT BABIES AND YOUNG CHILDREN COULD CHOKE ON. KEEP THE MOUSE OUT OF REACH OF SMALL CHILDREN. THIS PRODUCT IS NOT INTENDED FOR CHILDREN UNDER THE AGE OF 3.


Before using the mouse, turn it over and remove the red plastic shipping cap covering the ball as shown.

NOTE: The red cap must be removed or the mouse will not function.

BUTTONS - The *left* and *right* buttons are used to "click" and select during game play. On each game, the buttons will have a different function or may not be used at all. Consult the instruction booklet for the Game Pak you are using.

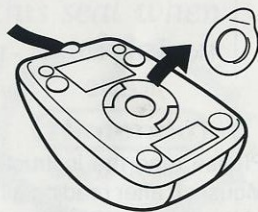

 
MOVEMENT - The mouse can be used on any clean flat surface such as a book or table but will work best with the *mouse pad* provided. Hold the mouse with the cord facing away from you and slide the mouse around the pad as shown. During game play, a cursor will follow your movements on the TV screen.

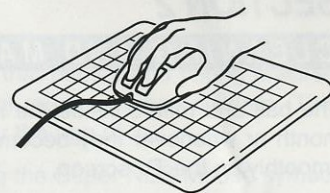

CAUTION: Do not use the mouse on a dirty or dusty surface such as a floor or carpet, as this may cause the mouse to malfunction.

CONNECTING TO THE CONTROL DECK

 Plug the Super NES Mouse into the socket on the front of the Control Deck as shown.

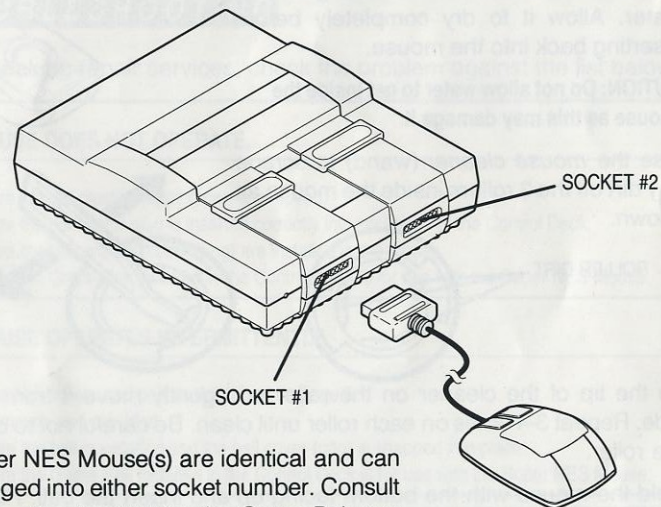

All Super NES Mouse(s) are identical and can be plugged into either socket number. Consult the instruction booklet for the Game Pak you are using.

NOTE: Do not plug or unplug the mouse from the Control Deck during game play or while the power is on, as this may cause a game malfunction.

SECTION 2

CLEANING AND MAINTENANCE

The ball and rollers inside the mouse should be cleaned once or twice a month or whenever they become dirty or when the cursor does not move smoothly on the TV screen.

NOTE: Continued use of the mouse with a dirty ball and rollers may cause the mouse to malfunction.

- 1 Turn the mouse over, press and turn the ball cover (counterclockwise) as shown.
- 2 Remove the ball cover and flip the mouse back over allowing the ball to come out.

WARNING: KEEP THE MOUSE OUT OF REACH OF SMALL CHILDREN.

- 3 Clean the ball with a mild detergent and water. Allow it to dry completely before inserting back into the mouse.

CAUTION: Do not allow water to get inside the mouse as this may damage it.

- 4 Use the *mouse cleaner* (wand) to scrape any dirt off the 3 rollers inside the mouse as shown.



Place the tip of the cleaner on the roller and gently move it from side to side. Repeat 3-4 times on each roller until clean. Be careful not to damage the roller.

- 5 Hold the mouse with the bottom facing up and insert the ball. Place the ball cover over the hole and rotate it until it drops down, then continue rotating the cover (clockwise) until it clicks into place.
- 6 Clean the *mouse pad* with a soft, slightly damp cloth. Allow it to dry completely before using again. (Use water only.)

MOUSE PRECAUTIONS

- 1 The Super NES Mouse contains a ball that babies and young children could choke on. Keep the mouse out of reach of small children. This product is not intended for children under the age of 3.
- 2 Use the mouse with Game Paks bearing the Super NES Mouse symbol only. If the mouse is used with other types of Game Paks, they may not operate correctly.
- 3 The Super NES Mouse is for use with the Super Nintendo Entertainment System Control Deck only and will not work with personal computers, etc. Mouse controllers intended for use with personal computers will not work with the Super NES Control Deck.

SECTION 3

TROUBLESHOOTING

Before seeking repair services, check the problem against the list below:

PROBLEM

THE MOUSE DOES NOT OPERATE.

SOLUTION

- Make sure the red plastic shipping cap is removed.
- Make sure the connector plug is inserted correctly into socket #1 of the Control Deck.
- Make sure the ball and ball cover (ring) are installed in the mouse.
- Make sure the Game Pak installed in the Control Deck is for use with the Super NES Mouse.

PROBLEM

THE MOUSE OPERATES INTERMITTENTLY.

SOLUTION

- Clean the ball, rollers and pad as described on page 5.
- Use the mouse pad provided.
- Make sure the ball is installed and the ball cover (ring) is snapped into place.
- Make sure the Game Pak installed in the Control Deck is for use with the Super NES Mouse.

IF YOU ARE STILL UNABLE TO SOLVE THE PROBLEM, PLEASE CALL THE NINTENDO WORLD CLASS SERVICE® CENTER CONSUMER ASSISTANCE HOTLINE AT: 1-800-255-3700

SECTION 4

WARRANTY AND SERVICE INFORMATION

90-DAY LIMITED WARRANTY

HARDWARE*, ACCESSORIES, GAME PAKS ("PRODUCT")

*HARDWARE ONLY: TO EXPEDITE AUTHORIZATION OF ANY REQUIRED WARRANTY WORK, WE RECOMMEND THAT YOU COMPLETE AND RETURN YOUR WARRANTY CARD WITHIN 10 DAYS OF PURCHASE (OR RECEIPT AS A GIFT).

90-DAY LIMITED WARRANTY

Nintendo of America Inc. ("Nintendo") warrants to the original purchaser that this product shall be free from defects in material and workmanship for a period of 90 days from the date of purchase. If a defect covered by this warranty occurs during this 90-day warranty period, Nintendo will repair or replace the defective product or component part, at its option, free of charge.

WARRANTY SERVICE OR REPAIR/SERVICE AFTER EXPIRATION OF WARRANTY

To receive this warranty service or to receive service after warranty expiration:

1. **DO NOT** return your product to the retailer.
2. Please call the **NINTENDO WORLD CLASS SERVICE®** Center Consumer Assistance Hotline at: **1-800-255-3700**. Our hours of operation are from 4:00 am to Midnight, Pacific Time, Monday through Saturday, and from 6:00 am to 7:00 pm, Pacific Time on Sundays (times subject to change). If the Nintendo Service Representative is unable to solve the problem over the telephone, you will be referred to the nearest **AUTHORIZED NINTENDO WORLD CLASS SERVICE®** Center for prompt, professional warranty service or repair and replacement components. You may also refer to your yellow pages directory under the heading of *Video Games - Service & Repair*, for the nearest location.

To satisfy the needs of our customers, Nintendo maintains a professional network of **AUTHORIZED NINTENDO WORLD CLASS SERVICE®** Centers located in major metropolitan areas and also offers express factory service. In some instances it may be necessary to ship the complete product, **FREIGHT PREPAID AND INSURED FOR LOSS OR DAMAGE** to the nearest service location.

This warranty shall not apply if the product has been damaged by negligence, accident, unreasonable use, commercial use, modification, tampering, or by other causes unrelated to defective materials or workmanship. This warranty shall not apply if any product serial number has been altered, defaced, or removed.

WARRANTY LIMITATIONS

ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO NINETY DAYS FROM THE DATE OF PURCHASE AND ARE SUBJECT TO THE CONDITIONS SET FORTH HEREIN. IN NO EVENT SHALL NINTENDO BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTIES.

The provisions of this warranty are valid in the United States and Canada only. Some states/provinces do not allow limitations on how long an implied warranty lasts or exclusion of consequential or incidental damages, so the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary between states/provinces.

REV-D

CONSUMER PARTS LIST & ORDER FORM

SUPER NES MOUSE PARTS LIST & ORDER FORM

THESE ITEMS ARE ALSO AVAILABLE AT YOUR LOCAL NINTENDO WORLD CLASS SERVICE® CENTER

Nintendo Part No.	Part Name	Price ea.	Qty.	Amount of Purchase
25466	Super NES Mouse™ manual	\$2.50		
24636	Super NES Mario Paint™ Game Pak manual	2.50		
22822	Super NES™ - Consumer Info./ Precautions Booklet	No Charge		
22821	Super NES - Game Pak cover	1.00		
25469	Mouse ball	1.00		
25468	Ball cover (ring)	1.00		
25465	Mouse pad	3.00		

SUBTOTAL

WASHINGTON STATE RESIDENTS ADD 8.2% SALES TAX

POSTAGE & HANDLING

(\$2 for order of \$4 or more, .50¢ for orders of less than \$4)

→ FOR EXPEDITED SHIPPING SERVICE (2 DAY AIR FREIGHT)
PLEASE ADD AN ADDITIONAL \$2.50

TOTAL AMOUNT DUE

To Order by Phone (Requires VISA or MASTERCARD) Call: 1-800-255-3700, Mon.- Sat., 4:00 a.m.-12:00 mid., Sun., 6:00 a.m.- 7:00 p.m., Pacific Time. Please have your VISA or MASTERCARD card number and expiration date ready.

To Order by Mail, Please Complete the Following:

1. Name _____ Phone () _____

Street Address _____

City _____ State _____ Zip _____

2. Enclose Money Order or Credit Card Authorization for Total Amount Due.

If paying by VISA or MASTERCARD:

Please charge total amount due of \$ _____ to my: ☐ VISA ☐ MASTERCARD

CARD # _____ Expiration Date _____

Name on Card (Print) _____

Signed _____

3. Mail to: Nintendo of America Inc., P.O. Box 97032, Redmond, WA 98073-9732

Allow 4 - 6 weeks for delivery. We cannot accept cash, stamps, or C.O.D. orders.
Prices are applicable within the United States only and are subject to change without notice.



**NEED HELP WITH INSTALLATION,
MAINTENANCE OR SERVICE?
CALL 1-800-255-3700.**

Nintendo®

Nintendo of America Inc.
P.O. Box 957, Redmond, WA 98073-0957 U.S.A. PRINTED IN JAPAN